



# Technical Tips R3-07-0005

## Runner Installation Direction

Woody's runners are designed to fit the specific ski in which it will be installed. Occasionally, due to the construction of the ski, it may not be clear from the configuration of the runner which end will be inserted into the leading part of the ski. To install the runner incorrectly could result in damage to the sled or personal injury.

The Dooly™ and Flat-Top® Series Runners that could be confused will always have a 90° angle in the front of the bar and a 30° angle cut at the rear of the runner. The 90° angle is installed in the front of the ski and the 30° cut is installed at the rear of the ski.

