



Technical Tip T7-07-0002-2


187 Stud Pattern Development with the Long Track Template 2

The 187 stud pattern is recommended for snowmobiles with 128" track length. To create this pattern, you will use the 198 single stud pattern from the Long Track 2 Template pictured below. The part number for the correct template is Long-Temp-2.

Follow the directions accompanying the template.

The 128" track has 3 less bars than the 136" track, so the pattern will only be repeated 17 times to complete the 187 stud quantity on a 128" track.

If you have any questions about marking this pattern, contact Woody's tech line.

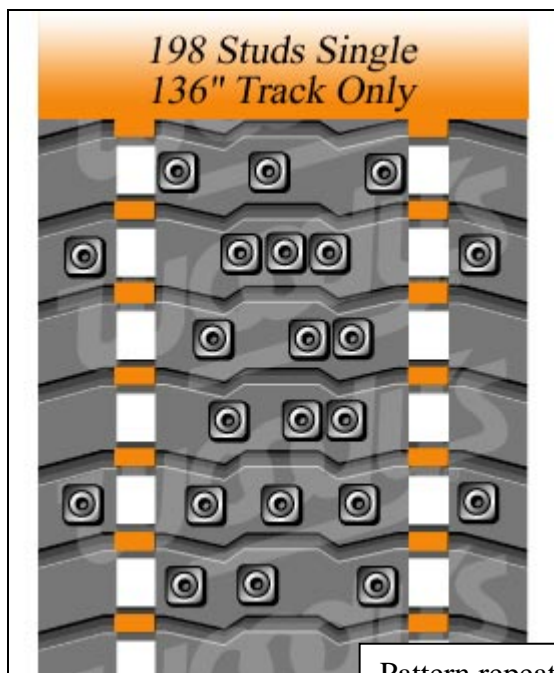

Pattern repeated twice on this illustration